


Operation Manual for No Chip Version

Panel Display 1

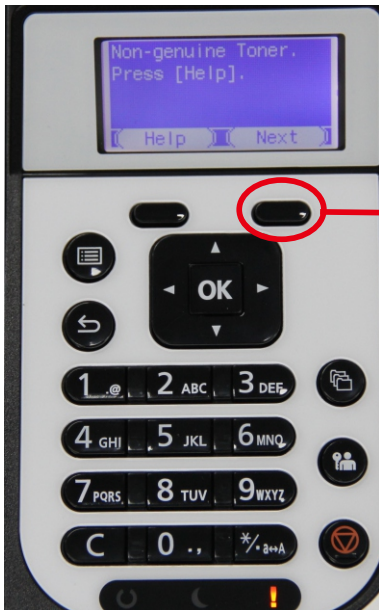

Step 1. When the machine panel shows "Non-genuine Toner", please press "NEXT" key.

Panel Display 2



Step 2. When the panel shows a random number, please press the same number key (For example, if the panel shows "5", please press "5" key; when it shows "8", please press "8" key.)

Panel Display 3



Step 3. When the panel shows two same numbers, please press "OK" key.

Panel Display 4



Step 4. After press "OK" key, please wait about 5 seconds. Later when the panel shows "Ready to print.", the toner cartridge is ready to be used.

Remark: Please repeat the above 4 steps after each restart.